


B - Piastrine, viti e dadi specifici per le frecce VMC da usare se si desidera sostituire le originali
B - Specific plates, screws and nuts for VMC light indicators to use for change the originals

A - Usare la piastra supporto frecce, i 3 distanziali H17, le 6 viti M5 x 20, i 6 dadi M5 e le 3 viti M5 x 35 solo se si vuole montare le frecce originali (come in foto).
B - Per montare le frecce VMC usare le apposite piastrine e fissare la piastra targa con le 3 viti M5 x 12.

A - Use light indicator support, 3 H17 spacers, 6 M5 x 20 screws, 6 M5 nuts and 3 M5 x 35 screws only if you want maintain the original light indicators (how a picture).
B - To mount the VMC light indicators use the appropriate plates and fix licence plate support with the 3 M5 x 12 screws.

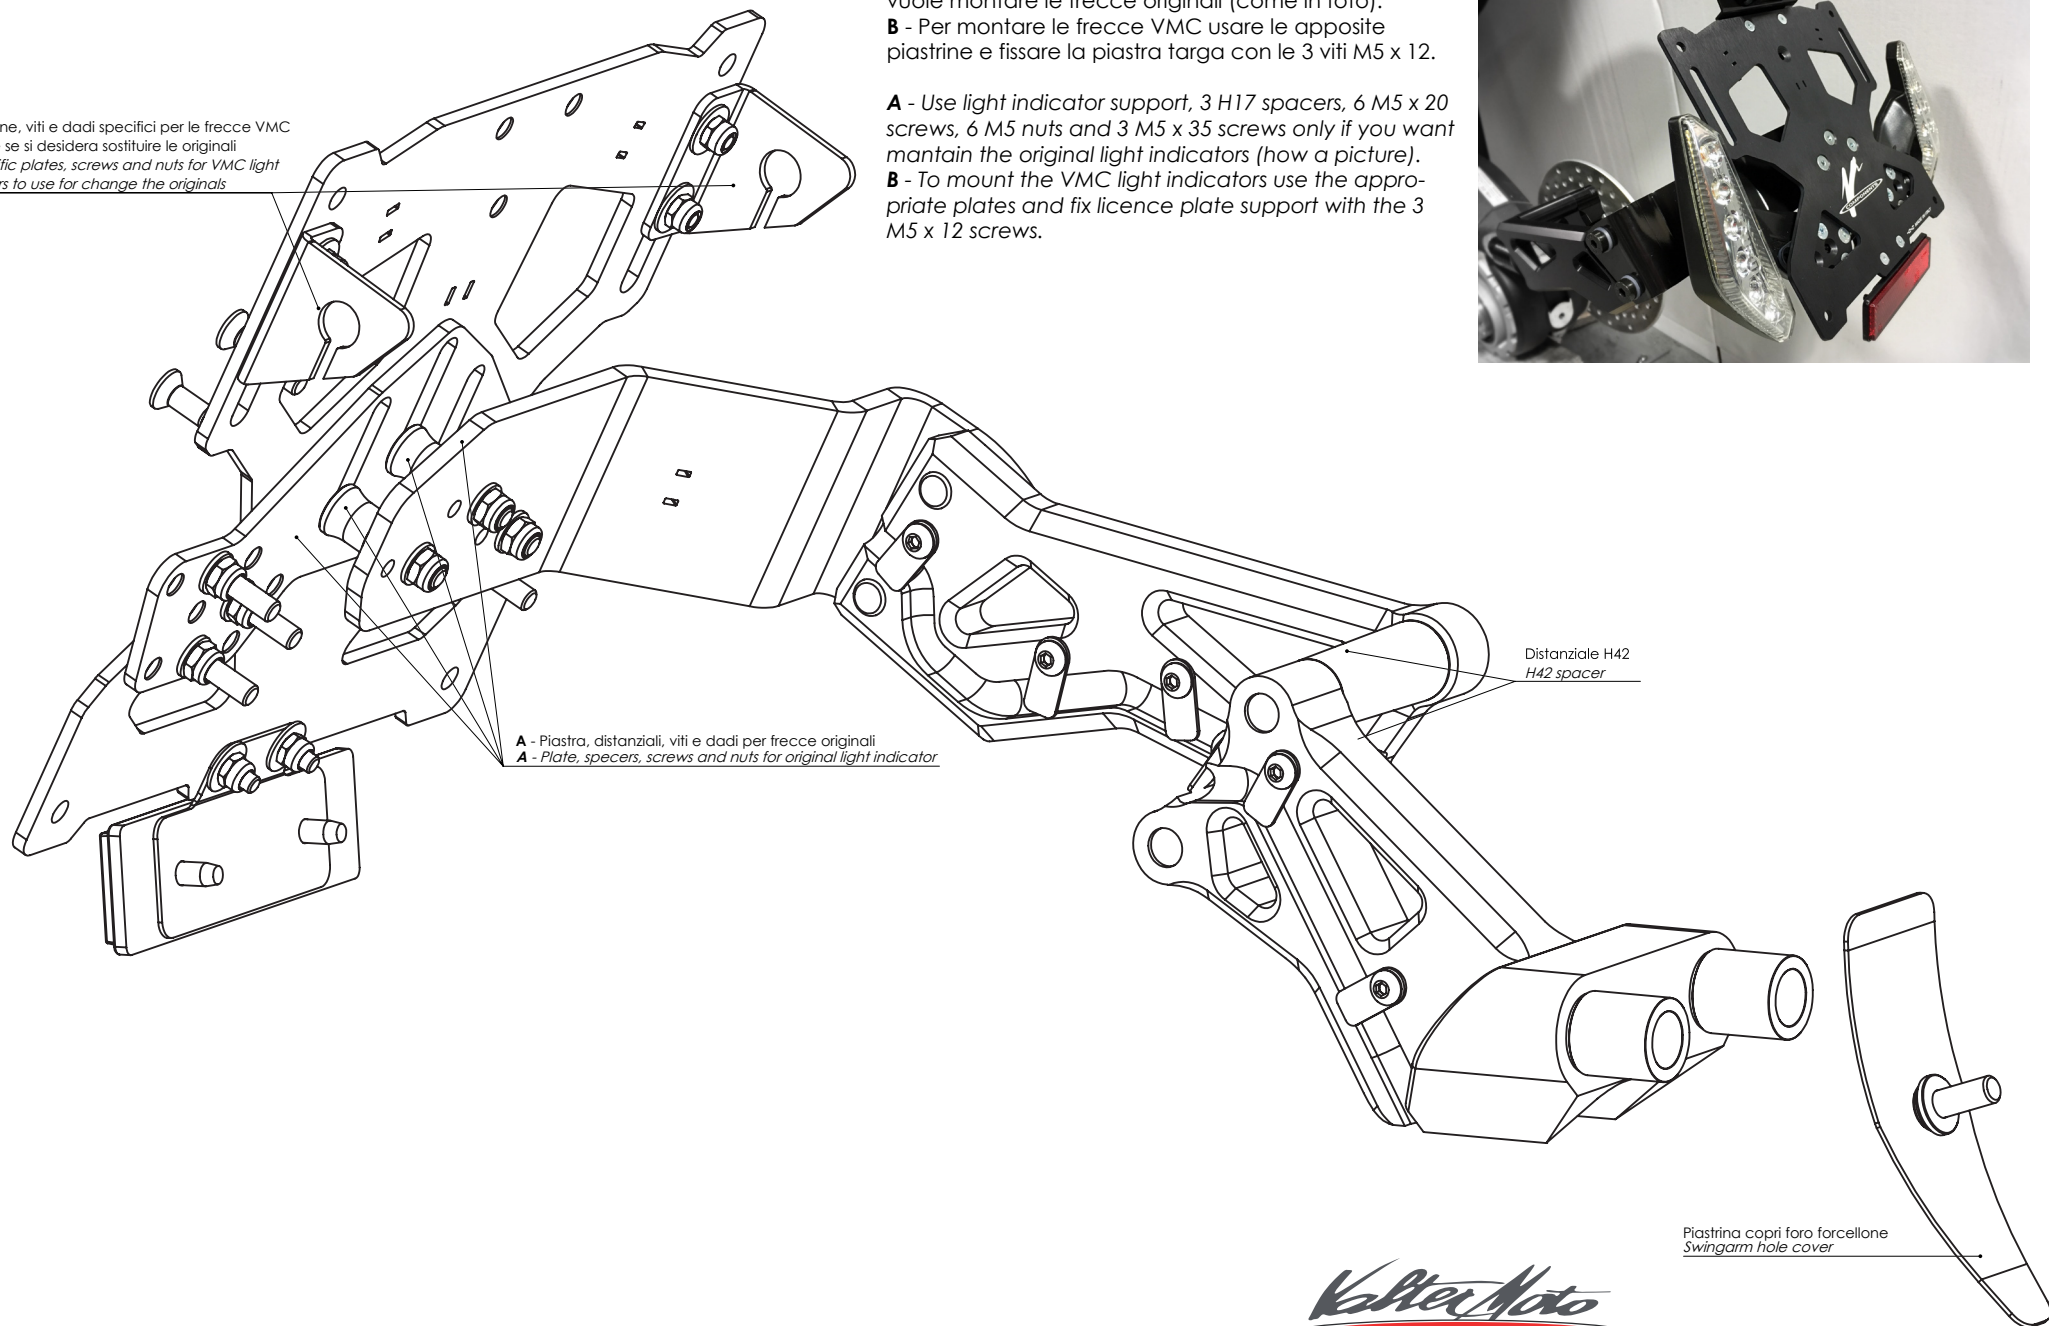

A - Piastra, distanziali, viti e dadi per frecce originali
A - Plate, spacers, screws and nuts for original light indicator

Piastrina copri foro forcellone
 Swingarm hole cover

DESCRIPTION	N°	DESCRIPTION	N°
PLATE HOLDER	1	PLATE HOLDER ARM - 2	1
REFLECTOR	1	WASHER FOR 6 MM HOLE	1
REFLECTOR SUPPORT	1	SWINGARM HOLE COVER	1
SUPPORT FOR ORIGINAL LIGHT INDICATOR	1	H42 D16 F10.2 SPACER	2
LEFT VMC LIGHT INDICATOR SUPPORT	1	CABLE FIX PLATE HOLDER	6
RIGHT VMC LIGHT INDICATOR SUPPORT	1	SWINGARM BUSHING	2
M4 x 12 TPSCE	6	SPACER FOR ORIGINAL LIGHT	3
LOW SELF-LOCKING NUT M4	6	M4 x 6 TCBE	6
M5 x 35 TPSCE	3	M8 X 16 TBCE	2
LOW SELF-LOCKING NUT M5	11	M8 X 20 TBCE	2
M4 WASHER	6	M10 X 70 TCCER	2
SUPPORT FOR ORIGINAL PLATE LIGHT	1	M6 X 20 TBCE	1
M5 WASHER	9	M5 X 20 TPSCE	6
CONNECTOR SWINGARM SIMPLE	1	M5 x 12 TPSCE	3
PLATE HOLDER ARM - 1	1	CABLE TIES	2
REGOLATION PLATE HOLDER	1	WIRING	1

